



The Transducer must be installed for this system to work correctly.

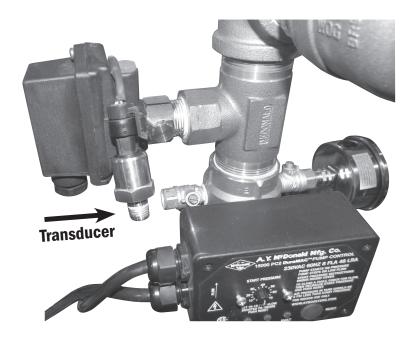

Unclip the Transducer from the Transducer cable.

Wrap the Transducer threads with Teflon tape, do not use pipe sealant.

Screw the Transducer into the ball valve. Do not over tighten.

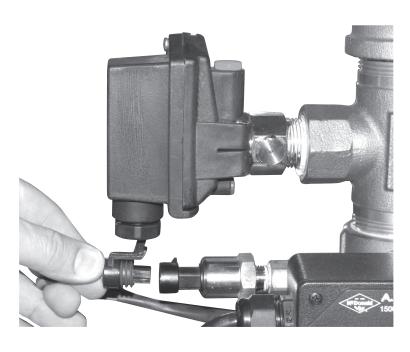

Plug in the Transducer cable, make sure the valve is open.