




N-S 10 FUEL TANK FILTER INSTALLATION INSTRUCTIONS

IMPORTANT: Do not exceed 12 PSI.; May cause bowl to blow off. This unit is recommended for use with **regular grades of Gasoline, Diesel Fuel, and Gasohol.**

Attach filter to storage tank fitting on inlet marked "IN". Attach hose and nozzle to filter opening marked "OUT".

CAUTION: Do not tighten filter cap using the filter bowl for leverage. Apply wrench to flat surfaces in center part of filter cap **ONLY** to tighten or remove. See illustration

Apply a coat of clean oil to the N-S 10 Gasket when installing the filter on the tank and each time the plastic bowl is removed. This will help to insure a better seal between the cap and the bowl.

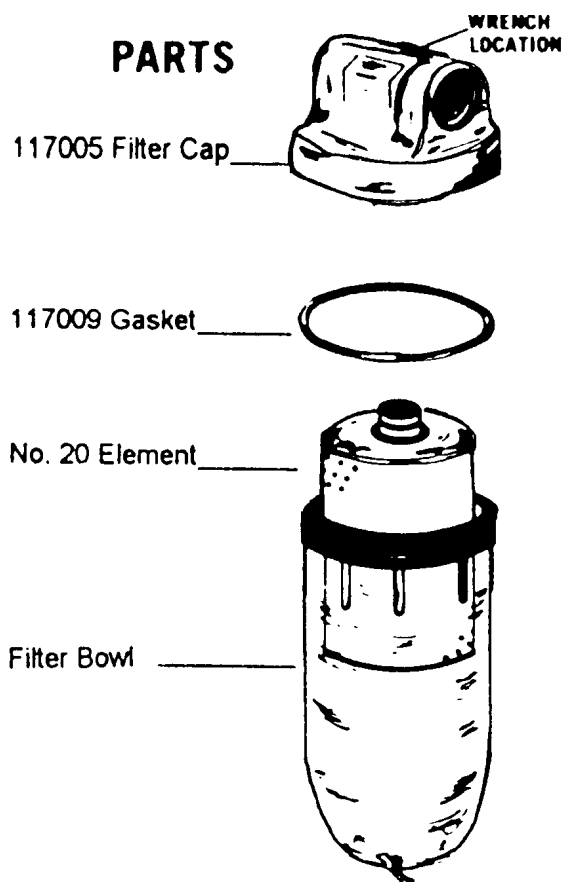

Visually check filter element for replacement. Change filter element when dirty or when flow is restricted. To replace filter element, unscrew filter bowl and unscrew filter element and replace. **Hand Tighten Only.**

Install a shut-off valve between tank and filter and keep closed except when withdrawing fuel.

When replacing filter element, always use No. 20 Element only.

Note: Bowl does **NOT** include gasket.