


# Model 662 Poppetted Adaptors

---

## Installation Instructions

1. Remove three (3) 5/16" socket heads and remove the old adaptor.
2. Thread the new adaptor on and hand tighten the three (3) 5/16" socket heads.
3. Remove the plastic zip tie from the back of the fusible link.
4. Remove the metal tool from between the adaptor top and base.
5. Finish tightening the socket head cap screws.

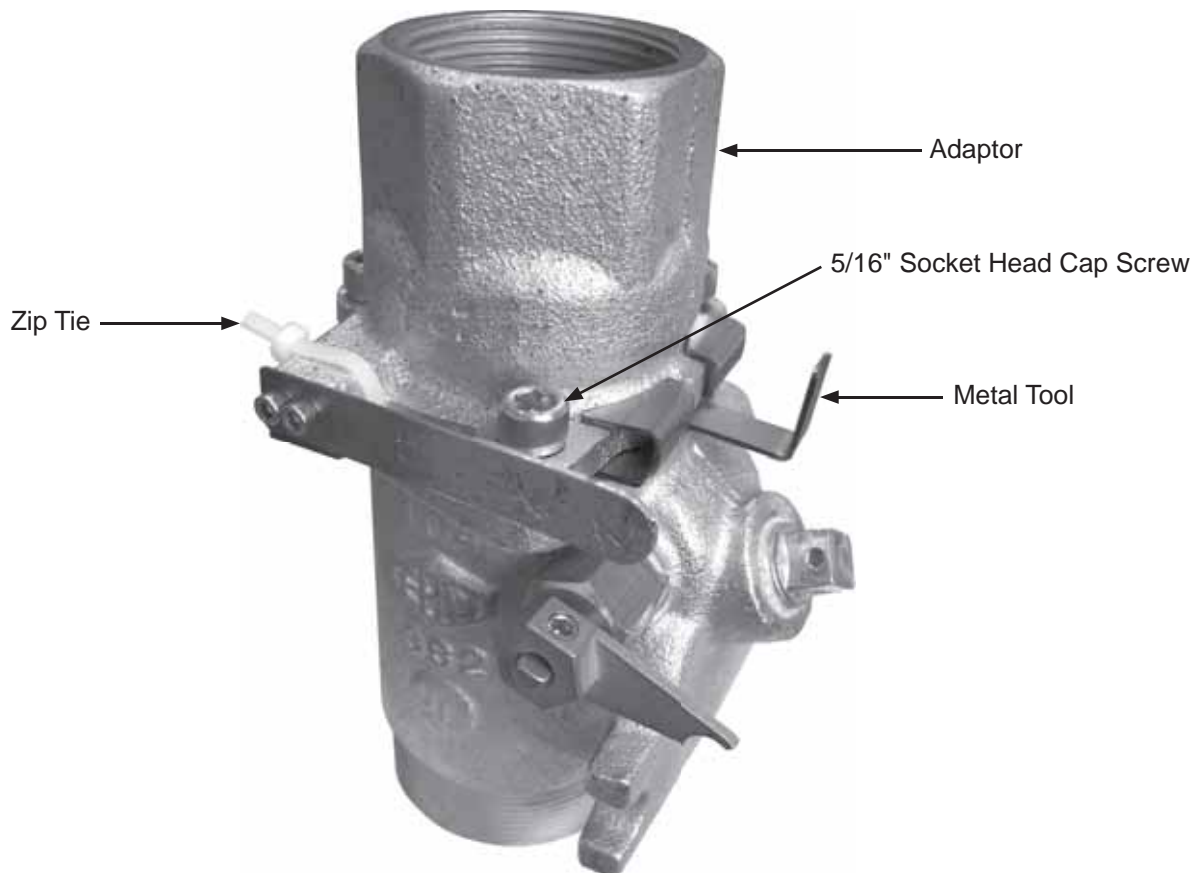

**Franklin Fueling Systems**

3760 Marsh Road  
Madison, WI 53718, U.S.A.  
Tel: +1 608 838 8786  
Tel: USA & Canada 1 800 225 9787  
Tel: Mexico 001 800 738 7610  
[www.franklinfueling.com](http://www.franklinfueling.com)