

Vapor Elbow Seal Replacement Kit


Installation Instructions

The Vapor Elbow Seal Replacement Kit is used in Vapor Elbow Assemblies: 88046001, 88046501 and 88045602.

Instructions

1. Remove the old, molded Vapor Seal (p/n 87020001) and Square Cut Seal Ring (p/n 1103405) (if one was installed) from the Vapor Elbow Assembly. Pliers may be needed to remove the old Vapor Seal because it fits tightly in the seal groove along with the Square Cut Seal Ring. Be aware that pliers will most likely gouge the round bulb seal surface of the Vapor Seal, making that seal non-reusable.
2. Lightly coat the Square Cut Seal Ring (p/n 1103405) with petroleum jelly and place it in the seal groove. Without twisting the gasket, push the Square Cut Seal Ring down to the lower portion of the seal groove.
3. Lightly coat the molded Vapor Seal (p/n 87020001) with petroleum jelly. Install the seal with the smooth side (without mold fill dimples) down towards the Square Cut Seal Ring (p/n 1103405). Bend the Vapor Seal and push it towards the Vapor Elbow seal groove until it snaps in. A hammer handle or similar blunt, non-gouging pushing tool may be used to assist in installing the Vapor Seal. Make sure that the Vapor Seal is positioned into the groove properly and the Square Cut Seal Ring did not twist or move out of position while installing the molded Vapor Seal.

Part Number	Description
90095	Vapor Elbow Seal Replacement Kit
87020001	Vapor Seal (molded)
1103405	Square Cut Seal Ring
F-9025	Vapor Elbow Seal Replacement Kit Installation Instructions

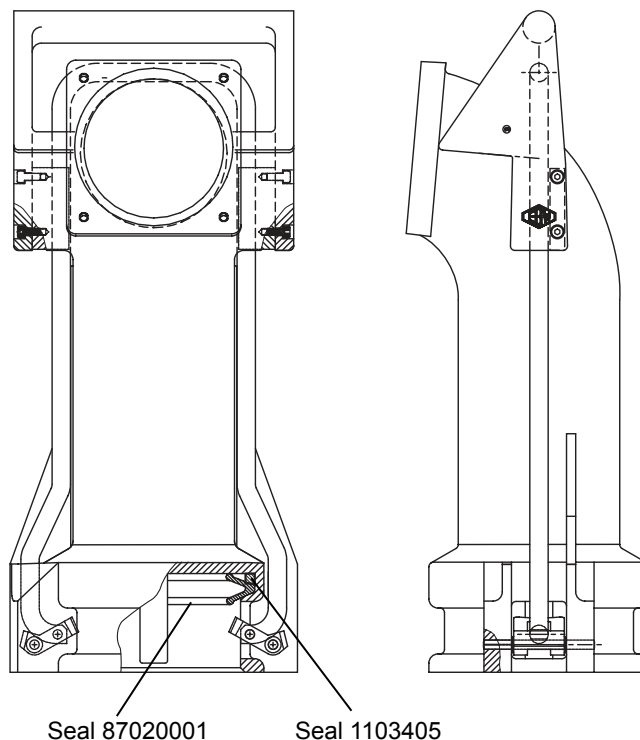

3760 Marsh Road
Madison, WI 53718, U.S.A.
Tel: +1 608 838 8786
Tel: USA & Canada 1 800 225 9787
Tel: Mexico 001 800 738 7610
www.franklinfueling.com