


880-249-01 Elbow Sight Glass

Installation Instructions

For models 880-455, 880-490, 880-491, 880-493 and 880-494

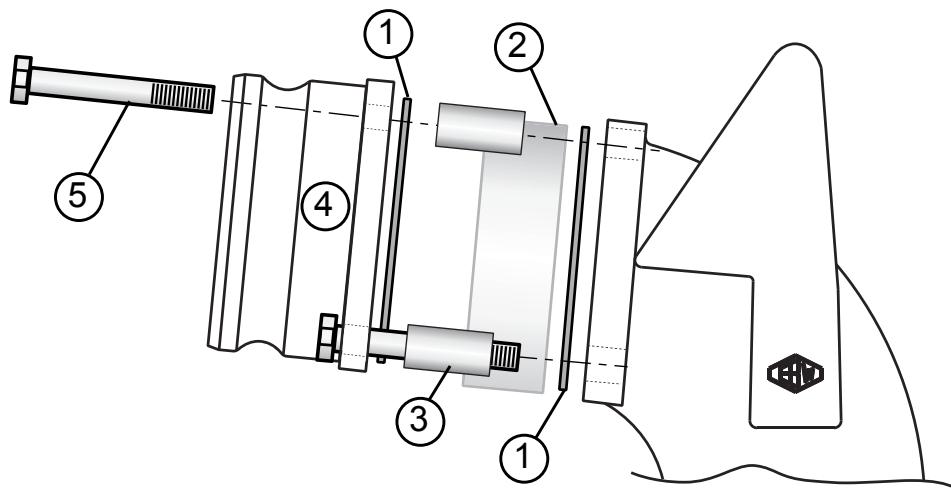

880-249-01 Parts List

Item	Description	Part Number
1	Seal (2)	88014001
2	Sight Tube	88016201
3	Spacers (4)	88015101
4	Adapter (not included)	—
5	5/16-18 x 2" Hex Head Cap Screws, st.st. (4)	1117616

1. Install seal (item 1) in the seal seat of the vapor elbow.
2. Set the sight glass (item #2) in place.
3. Set a sight glass seal (item #1) in the machined seat in the adaptor.
4. Line up the sight glass spacers (item #3) with the bolt holes in the vapor elbow.
5. Line up the adaptor bolt holes with the sight glass spacers.
6. Install the four 5/16" - 18 x 2" hex head cap screws (item #5).



Franklin Fueling Systems

3760 Marsh Road
Madison, WI 53718, U.S.A.
Tel: +1 608 838 8786
Tel: USA & Canada 1 800 225 9787
Tel: Mexico 001 800 738 7610
www.franklinfueling.com